


ST-1020 STILL-LIFE PHOTO TABLE

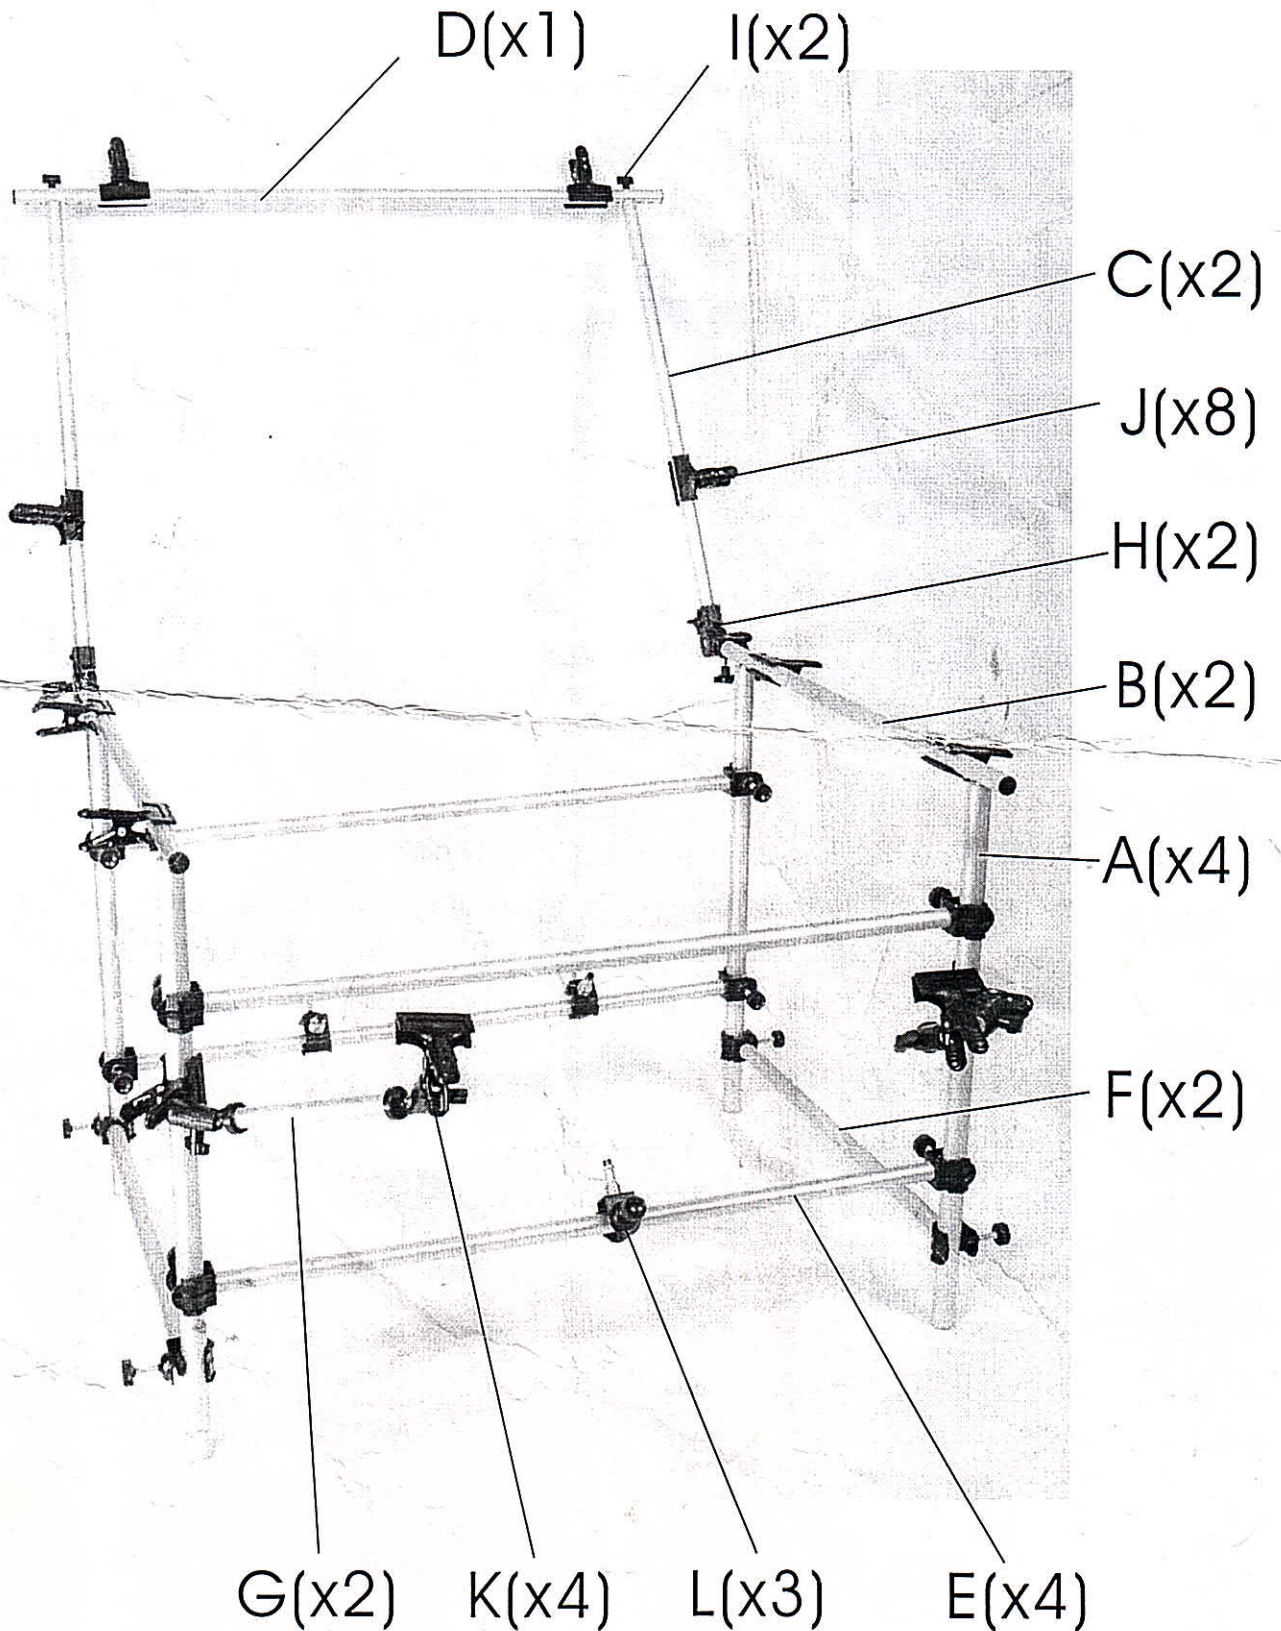


ST-1020 STILL-LIFE PHOTO TABLE

ASSEMBLING INSTRUCTIONS :


1. Screw in the 2 "A" rods into "B" rods as per drawing.

(Note: do not remove the hexagonal screws on rod "B")

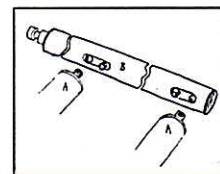


2. Clip two "E" rods on the front and two on the rear of "A" rods.


Make sure the balancing of the rods fixed.

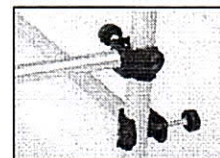


3. Put the rods "B" & "C" onto the tilting bracket, "H", as in the drawing while the screws of the bracket faced downward and the handle face outward.

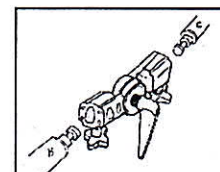

4. Screw the knobs "I" through the third hole on rod "D" and then ends of rod "C".

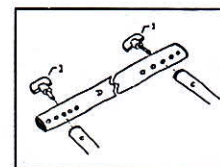

5. Clip the rod "F", one on each side onto rod "A".

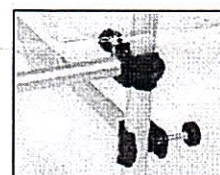

6. The frame of the table has been formed. Put the plastic sheet over the frame and clip it at the top and then two sides.

7. Fixed 2 swivel clips at the end of rod "G" and then clip one side to a rod "A" and one side to the end of plastic sheet. Do it the same on the opposite side. The plastic sheet will then be bent downward at the end.

8. There are 3 spare clips with which you can hold the lights on specific location prefer.

ACCESSORIES INCLUDED :

A. 2-SECTION ADJUSTABLE LEGS, 61~95cm (ø3.15cm)	x 4pcs
B. 87cm TABLE TOP TUBES (ø2.5cm)	x 2pcs
C. 73.5cm TUBES FOR ANGLE ADJUSTMENT (ø2.5cm)	x 2pcs
D. 108.5cm BACK-SIDE TUBE (ø2.5cm)	x 1pce
E. 91cm SUPPORTING RODS (ø2.5cm)	x 4pcs
F. 65.5cm VERTICAL SUPPORTING (ø2.5cm)	x 2pcs
G. 20cm FIXING ROD (ø2.2cm)	x 2pcs
H. TILTING BRACKET	x 2pcs
I. SCREW KNOB	x 2pcs
J. METAL CLIPS	x 8pcs
K. SWIVEL CLIP	x 4pcs
L. CLIP WITH SPIGOT	x 3pcs
M. PLASTIC SHEET	x 1pce
N. CARRYING CASE	x 1pce